 


ECO HOUZNG

OWNER'S MANUAL

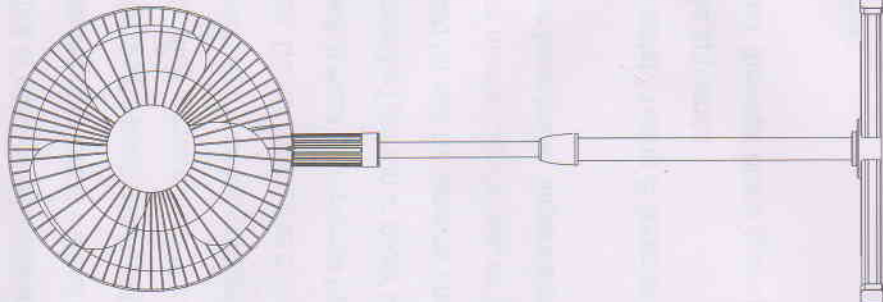

**OSCILLATING PEDESTAL FAN
MODEL#FS40-19MA (Item#CT40019B)**

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

 
1. Do not leave the fan running unattended.
2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
3. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
4. If the supply cord is damaged, it must be replaced by manufacturer or its serviceagent or a similarly qualified person in order to avoid a hazard.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety Young children should be supervised to ensure that they do not play with the appliance.
6. When the fan was assembled, the rotor blade guard shall not be taken off anymore
 - Prior cleaning unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.
7. **WARNING**—To reduce the risk of fire or electric shock, Do not use this fan with any solid-state speed control device.

RULES FOR SAFE OPERATION


1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. **DO NOT** use fan in window, rain may create electrical hazard.
5. Household use only.

INSTALLATION INSTRUCTIONS



Name of components

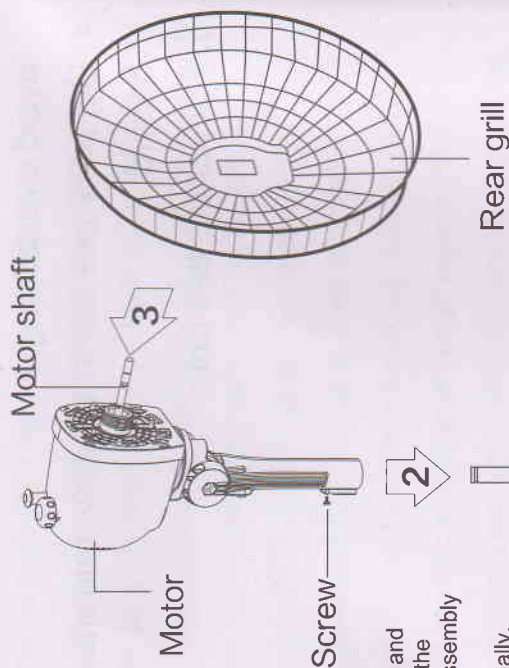

 Loosen 4 sets of screws, washers and spring washers which are fitted in the center section on the stand and assembly the extension pole onto the base enclosure with these screws originally.


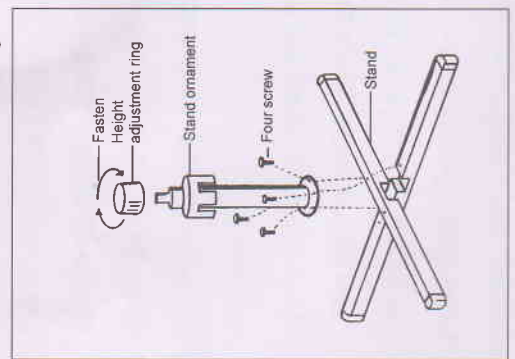


Front and Rear Guard Installation

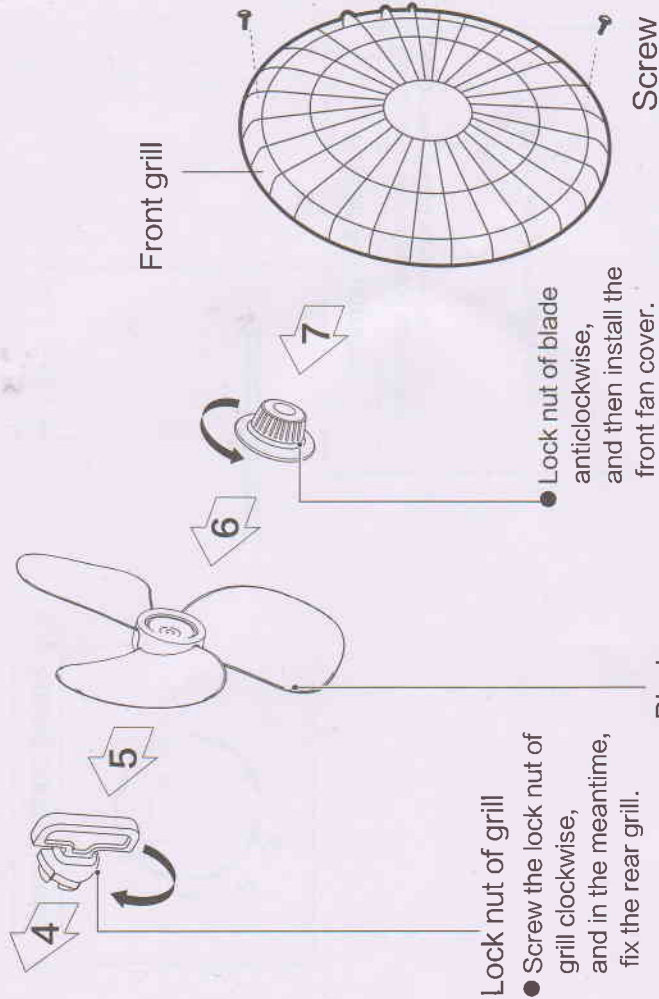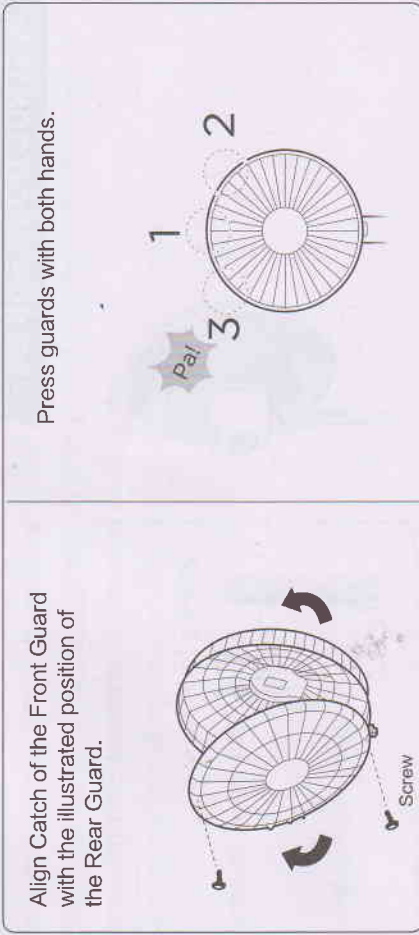  

- Screw the lock nut of grill clockwise, and in the meantime, fix the rear grill.
- Lock nut of blade anticlockwise, and then install the front fan cover.
- Pull the blade to rotate after installing, so as to ensure that the blade can be normally rotated.

  INSTRUCTIONS FOR USE

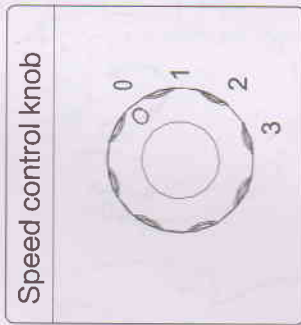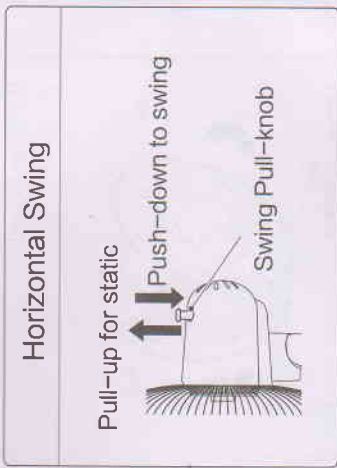

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Thoroughly to remove soap film with clean water.
3. Be sure not to make water or other liquid enter inside of motor.

SERVICE AND SUPPORT

This article includes a limited warranty of one (1) year against defects in workmanship and material (s). Excluding wear or breakage caused by abuse or improper use.

In the event of a warranty claim or if service is required for this unit, please contact us at the following:

Email: support@ecohoung.com
http: www.ecohoung.com/

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

NOTE: PROOF OF PURCHASE

IS REQUIRED FOR ALL WARRANTY CLAIMS

PRINTED IN CHINA