

Sabbath/Door Wake Up	activate the control and interior lights, press any pad. respond to the door opening/closing. This mode can be used when observing certain religious holidays such as the Sabbath. To (on some models) To turn the option ON/OFF , press and hold the START and Temp/Boost pads for 5 seconds, close the door and wait 3 minutes for the dishwasher to go into sleep mode. In the OFF mode, the control display, control sounds, and interior lights will not be illuminated.
Clean	Displayed when a wash cycle is complete. The light stays ON as a reminder that the dishes are clean. Opening the door or pressing any key while the door is closed will turn the light off.
Sanitized	Displayed at end of the cycle when Steam-Sanit/Presoak-Sanit/Sanitize has been selected and the dishwasher has met the requirements for sanitization. See Steam-Sanit/Presoak-Sanit/Sanitize for complete description. Opening the door or pressing any pad while door is closed will turn the light off.
Cycle Indicator Lights and Sounds	To cancel a wash cycle, press and hold the Start pad for 3 seconds and close door. The dishwasher will drain, emit a beep sound, and the wash cycle light will turn OFF .
Cancel	To interrupt or pause a dish cycle, slowly open the door. Opening the door will cause the wash cycle to pause. The dishwasher will beep every minute to remind you to close the door. To restart or resume the cycle, press Start , and close the door within 4 seconds.
Interrupt or Pause	To interrupt or pause a dish cycle, slowly open the door. Opening the door will cause the wash cycle to pause. The dishwasher will beep every minute to remind you to close the door. To restart or resume the cycle, press Start , and close the door within 4 seconds.
Start	Door can be open to select the desired options. Press the Start pad and close the door within 4 seconds to start the cycle or begin the Delay Hours/Day countdown. The wash cycle will begin shortly after closing the door. If the door is open, the illuminated lights will turn off if a pad is not pressed within two minutes. To activate the display, close and open the door or press any pad.

6 Start Dishwasher	indicate the control is locked and will turn off to indicate the control is unlocked. or the Steam-Sanit/Presoak-Sanit/Sanitize pads at the same time, for 3 seconds. The Lock Controls light will turn on to indicate the control is locked and will turn off to indicate the control is unlocked.
Lock Controls	You can lock the controls to prevent selections from being made. You can also lock the controls after you have started a cycle (on some models). To lock the controls, press Start one time to begin countdown. The cycle will start once allowed time has expired.
Delay Hours/Day	(on some models) Delays the start of a wash cycle up to 12 hours depending on model. Press Delay Hours/Day , to select the number of hours, then the start Start one time to begin countdown. This option can be used when there is only half a load of dishes.
Zones/Wash Zones	(on some models) Selecting either the Upper or Lower Zones/Wash Zones will target dishwashing of just one rack. This will shorten the cycle time and conserve energy. This option can be used when there is only half a load of dishes.
Bottle Jets	Use this to wash difficult to clean, dishwasher safe baby bottles, sport bottles, tall coffee cups, etc. (on some models) This option increases the time that the bottle jets are on and may add up to 23 minutes to the cycle time.
Sanitize	(on some models) This option increases the temperature to help clean heavily soiled dishes and may increase the overall cycle time. Option may be turned On or Off during the wash cycle. Wash temp also increases the final rinse temperature which can improve dry performance.
Steam-Sanit/Presoak-Sanit	This option raises the water temperature in the final rinse to sanitize dishes and improve dry performance. The cycle length will vary depending on the temperature of your inlet water. NOTE: This option is monitored for sanitization requirements. If the cycle is interrupted during or after the main wash portion or if the incoming water temperature is so low that adequate water heating cannot be achieved, the sanitizing conditions may not be met. In these cases, the Sanitized light will not illuminate at the end of the cycle. Utilizing this option will modify the requirements of Section 6, NSF 184 for soil removal and sanitization efficacy. NOTE: NSF certified residential dishwashers are not intended for licensed food establishments.
Ultra-High	(on some models) - This option can be selected by pressing the Dry/Dry Boost pad twice to illuminate the Ultra-High light. It will add additional time to your drying option, further enhancing the dishwasher performance for difficult to dry items.
Temp/Boost	(on some models) This option increases the temperature to help clean heavily soiled dishes and may increase the overall cycle time. Option may be turned On or Off during the wash cycle. Wash temp also increases the final rinse temperature which can improve dry performance.
Select Options	- The light by the selected pad will be lit to indicate which Option has been selected.
Rinse	(on some models) For rinsing partial loads to be washed later. Do not use detergent. Detergent is not dispensed during Rinse cycle performance. It is safe for china and crystal with no options selected.
Light	This cycle is for light to medium soiled dishes but because of its lower final rinse temperature, will provide limited dry performance.
Quick/1-Hour Wash	This cycle was designed to wash loosely soiled dishes in 1 hour. Heated dry will add 65-105 minutes.
Medium/Normal	This cycle is meant for daily regular or typical use to completely wash a full load of normally soiled dishes and is designed to conserve both water and energy. NOTE: Normal/Medium was used to rate the energy efficiency of this dishwasher.
Heavy	This cycle is meant for heavily soiled dishes, cookware, pots, or pans with dried-on or baked-on soils. Everyday dishes are safe to be used in this cycle.
Smart/Autopause	(on some models) This cycle automatically senses the soil level and adjusts the wash cycle accordingly.

4 Select Cycle	Press the furthest most pad on the left (on some models) for the desired wash cycle. The light next to the furthest most pad on the left (on some models) will be on to indicate which wash cycle has been selected. The cycle may be selected with the door in the open position. The cycle will not start until after the door is closed and Start is selected.
3 Add Rinse Agent	Add rinse agent to the rinse agent dispenser such as Finish® Jet-Dry® Rinse Aid.
2 Add Detergent	Automatic Dishwashing Detergent. Use a detergent such as Finish® Quantum®
1 Load Dishwasher	For best dishwasher results, follow the rack loading guidelines found in the Complete Owner's Manual - See the Contact Us section. No pre-rinsing of normal food soil is required. Scrape off hard soils, including bones, toothpicks, skins, and seeds. Remove heavy vegetables, meat trimmings, and excessive amounts of grease or oil. Remove acidic food soils that can discolor stainless steel.

WARNING	The retaining posts can be a choke hazard for small children. Remove from the dishwasher. Keep out of reach of children.
----------------	--

Filters	Inspect and clean the filters periodically. This should be done every other month or more depending on usage. If there is a decrease in wash performance or dishes feel gritty, this is also an indication the filters need to be cleaned.
----------------	--

EXTERIOR DOOR PANEL	Before cleaning the front panel, make sure you know what type of material the front panel is made of. Refer to the last two letters of your model number. You can locate your model number on the left-hand tub wall just inside the door. If your model number ends with BB, CC, DS, D1, ES, FS, SA, TS, WW or WZ then you have a painted door panel. If your model number ends with SS or S1, then you have a Stainless Steel door panel. If your model number ends with II, then you have an integrated model.
PAINTED/COATED DOOR PANEL	Follow the instructions below for cleaning the door panel for your specific model.
INTEGRATED DOOR PANEL	Follow the instructions below for cleaning the door panel for your specific model.

WARNING	For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, electric shock, and to prevent property damage, personal injury, or death.
WARNING	PROPER INSTALLATION AND MAINTENANCE
WARNING	WHEN USING YOUR DISHWASHER, FOLLOW BASIC PRECAUTIONS, INCLUDING THE FOLLOWING:

WARNING	Water Heater Safety
WARNING	Risk of Child Entrapment
CAUTION	To Prevent Minor Injury and Property Damage

WARNING	Risk of Child Entrapment
CAUTION	To Prevent Minor Injury and Property Damage

CAUTION	To Prevent Minor Injury and Property Damage
----------------	---

7 Cycle Indicator Lights and Sounds	Displayed at end of the cycle when Steam-Sanit/Presoak-Sanit/Sanitize has been selected and the dishwasher has met the requirements for sanitization. See Steam-Sanit/Presoak-Sanit/Sanitize for complete description. Opening the door or pressing any pad while door is closed will turn the light off.
Cancel	To cancel a wash cycle, press and hold the Start pad for 3 seconds and close door. The dishwasher will drain, emit a beep sound, and the wash cycle light will turn OFF .
Interrupt or Pause	To interrupt or pause a dish cycle, slowly open the door. Opening the door will cause the wash cycle to pause. The dishwasher will beep every minute to remind you to close the door. To restart or resume the cycle, press Start , and close the door within 4 seconds.
Start	Door can be open to select the desired options. Press the Start pad and close the door within 4 seconds to start the cycle or begin the Delay Hours/Day countdown. The wash cycle will begin shortly after closing the door. If the door is open, the illuminated lights will turn off if a pad is not pressed within two minutes. To activate the display, close and open the door or press any pad.

6 Start Dishwasher	indicate the control is locked and will turn off to indicate the control is unlocked. or the Steam-Sanit/Presoak-Sanit/Sanitize pads at the same time, for 3 seconds. The Lock Controls light will turn on to indicate the control is locked and will turn off to indicate the control is unlocked.
Lock Controls	You can lock the controls to prevent selections from being made. You can also lock the controls after you have started a cycle (on some models). To lock the controls, press Start one time to begin countdown. The cycle will start once allowed time has expired.
Delay Hours/Day	(on some models) Delays the start of a wash cycle up to 12 hours depending on model. Press Delay Hours/Day , to select the number of hours, then the start Start one time to begin countdown. This option can be used when there is only half a load of dishes.
Zones/Wash Zones	(on some models) Selecting either the Upper or Lower Zones/Wash Zones will target dishwashing of just one rack. This will shorten the cycle time and conserve energy. This option can be used when there is only half a load of dishes.
Bottle Jets	Use this to wash difficult to clean, dishwasher safe baby bottles, sport bottles, tall coffee cups, etc. (on some models) This option increases the time that the bottle jets are on and may add up to 23 minutes to the cycle time.
Sanitize	(on some models) This option increases the temperature to help clean heavily soiled dishes and may increase the overall cycle time. Option may be turned On or Off during the wash cycle. Wash temp also increases the final rinse temperature which can improve dry performance.
Steam-Sanit/Presoak-Sanit	This option raises the water temperature in the final rinse to sanitize dishes and improve dry performance. The cycle length will vary depending on the temperature of your inlet water. NOTE: This option is monitored for sanitization requirements. If the cycle is interrupted during or after the main wash portion or if the incoming water temperature is so low that adequate water heating cannot be achieved, the sanitizing conditions may not be met. In these cases, the Sanitized light will not illuminate at the end of the cycle. Utilizing this option will modify the requirements of Section 6, NSF 184 for soil removal and sanitization efficacy. NOTE: NSF certified residential dishwashers are not intended for licensed food establishments.
Ultra-High	(on some models) - This option can be selected by pressing the Dry/Dry Boost pad twice to illuminate the Ultra-High light. It will add additional time to your drying option, further enhancing the dishwasher performance for difficult to dry items.
Temp/Boost	(on some models) This option increases the temperature to help clean heavily soiled dishes and may increase the overall cycle time. Option may be turned On or Off during the wash cycle. Wash temp also increases the final rinse temperature which can improve dry performance.
Select Options	- The light by the selected pad will be lit to indicate which Option has been selected.
Rinse	(on some models) For rinsing partial loads to be washed later. Do not use detergent. Detergent is not dispensed during Rinse cycle performance. It is safe for china and crystal with no options selected.
Light	This cycle is for light to medium soiled dishes but because of its lower final rinse temperature, will provide limited dry performance.
Quick/1-Hour Wash	This cycle was designed to wash loosely soiled dishes in 1 hour. Heated dry will add 65-105 minutes.
Medium/Normal	This cycle is meant for daily regular or typical use to completely wash a full load of normally soiled dishes and is designed to conserve both water and energy. NOTE: Normal/Medium was used to rate the energy efficiency of this dishwasher.
Heavy	This cycle is meant for heavily soiled dishes, cookware, pots, or pans with dried-on or baked-on soils. Everyday dishes are safe to be used in this cycle.
Smart/Autopause	(on some models) This cycle automatically senses the soil level and adjusts the wash cycle accordingly.

EXTERIOR DOOR PANEL	Before cleaning the front panel, make sure you know what type of material the front panel is made of. Refer to the last two letters of your model number. You can locate your model number on the left-hand tub wall just inside the door. If your model number ends with BB, CC, DS, D1, ES, FS, SA, TS, WW or WZ then you have a painted door panel. If your model number ends with SS or S1, then you have a Stainless Steel door panel. If your model number ends with II, then you have an integrated model.
PAINTED/COATED DOOR PANEL	Follow the instructions below for cleaning the door panel for your specific model.
INTEGRATED DOOR PANEL	Follow the instructions below for cleaning the door panel for your specific model.

WARNING	The retaining posts can be a choke hazard for small children. Remove from the dishwasher. Keep out of reach of children.
----------------	--

Filters	Inspect and clean the filters periodically. This should be done every other month or more depending on usage. If there is a decrease in wash performance or dishes feel gritty, this is also an indication the filters need to be cleaned.
----------------	--

EXTERIOR DOOR PANEL	Before cleaning the front panel, make sure you know what type of material the front panel is made of. Refer to the last two letters of your model number. You can locate your model number on the left-hand tub wall just inside the door. If your model number ends with BB, CC, DS, D1, ES, FS, SA, TS, WW or WZ then you have a painted door panel. If your model number ends with SS or S1, then you have a Stainless Steel door panel. If your model number ends with II, then you have an integrated model.
PAINTED/COATED DOOR PANEL	Follow the instructions below for cleaning the door panel for your specific model.
INTEGRATED DOOR PANEL	Follow the instructions below for cleaning the door panel for your specific model.

WARNING	For your safety, the information in this manual must be followed to minimize the risk of fire, explosion, electric shock, and to prevent property damage, personal injury, or death.
WARNING	PROPER INSTALLATION AND MAINTENANCE
WARNING	WHEN USING YOUR DISHWASHER, FOLLOW BASIC PRECAUTIONS, INCLUDING THE FOLLOWING:

WARNING	Water Heater Safety
WARNING	Risk of Child Entrapment
CAUTION	To Prevent Minor Injury and Property Damage

WARNING	Risk of Child Entrapment
CAUTION	To Prevent Minor Injury and Property Damage

CAUTION	To Prevent Minor Injury and Property Damage
----------------	---

