

For Professional Technical Support call **1-844-241-5521**


Where Used

This pump is designed to be used with a sink where a gravity drain line is not available.

Typical Application

Perfect for basement bars, laundry, utility sinks, etc. Easy to install underneath the sink-eliminates need for traps, vents, and costly labor charges.

Typical Installations

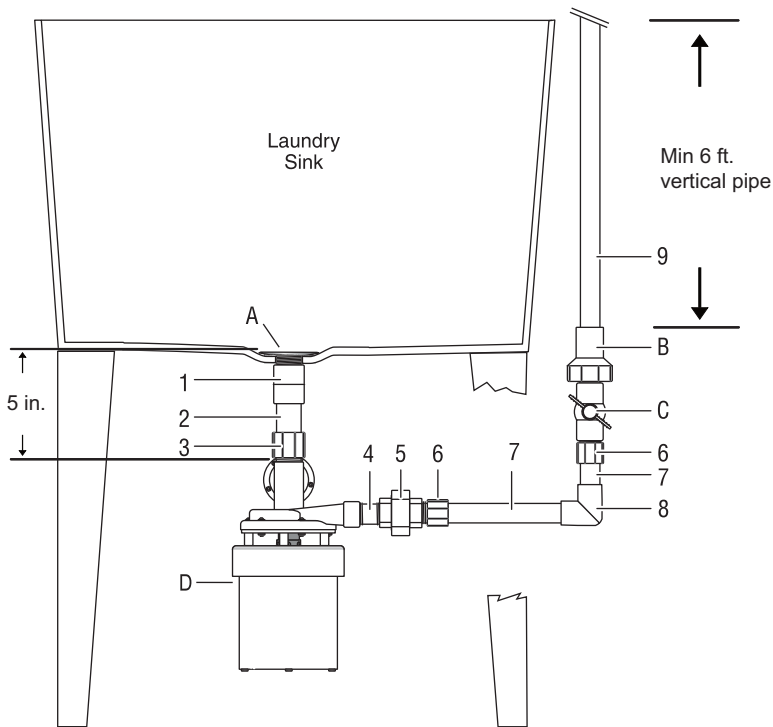

Fittings Supplied:

- A. Sink Drain Screen
- B. 1-1/4" NPT x 1-1/4" Slip Check Valve
- C. 1-1/4" NPT Ball Valve

Purchase Separately:

- 1. 1-1/2" NPT x 1-1/2" Slip Female Adapter
- 2. 1-1/2" Schedule 40 PVC Pipe, to fit
- 3. 1-1/2" NPT x 1-1/2" Slip Male Adapter
- 4. 1-1/4" NPT Galvanized Nipple (to fit)
- 5. 1-1/4" NPT Galvanized Union
- 6. 1-1/4" NPT x 1-1/4" Male Adapter
- 7. 1-1/4" Schedule 40 PVC Pipe, to fit
- 8. 1-1/4" Socket to Socket 90° Elbow
- 9. 1-1/4" Schedule 40 PVC Pipe to Drain

Frequently Asked Question

1. Does it have automatic switch?

Yes, it has a piggyback diaphragm switch for automatic or manual operation. It starts and stops automatically based on the water level.

2. Does this pump empty the sink completely or is there a little standing water after the pump shuts off?

The pump will empty the sink completely as long as the check valve keeps water from backing up into the sink. Pump may cycle on and off a few times as the sink finishes draining.

3. What additional items do I need for the Auto Laundry Pump?

Purchase Separately:

- | | |
|---|---------------------|
| 1-1/2" NPT x 1-1/2" Slip Female Adapter | See Store Associate |
| 1-1/2" Schedule 40 PVC Pipe, to fit | See Store Associate |
| 1-1/2" NPT x 1-1/2" Slip Male Adapter | See Store Associate |
| 1-1/4" NPT Galvanized Nipple (to fit) | See Store Associate |
| 1-1/4" NPT Galvanized Union | See Store Associate |
| 1-1/4" NPT x 1-1/4" Male Adapter | See Store Associate |
| 1-1/4" Schedule 40 PVC Pipe, to fit | SKU # 1000101181 |
| 1-1/4" Socket to Socket 90° Elbow | See Store Associate |
| 1-1/4" Schedule 40 PVC Pipe to Drain | See Store Associate |
| PVC Pipe Cement | See Store Associate |
| PTFE pipe thread sealant tape | See Store Associate |
| 1-1/2" PVC Solvent Union – optional | See Store Associate |

4. How to fit the unit to the sink?

The diaphragm switch senses the water pressure to start the pump, so to keep the pump work correctly, you must connect the unit to the bottom of the sink with about 5 inches space. Sitting the unit flush with the sink will not start pump correctly.

5. Can I leave it on the floor?

Yes, you can leave it on the floor or suspend it under the sink.

6. Where to install the check valve?

The vertical height from the check valve to the pipe outlet should be at least 6.5ft to void check valve leakage. This is very important and follow the manual for detailed information.

