
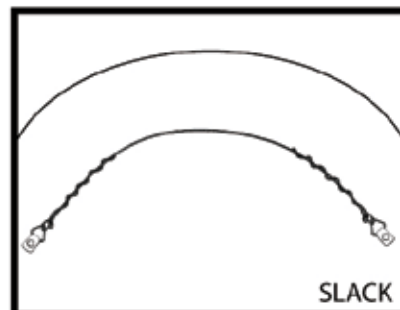
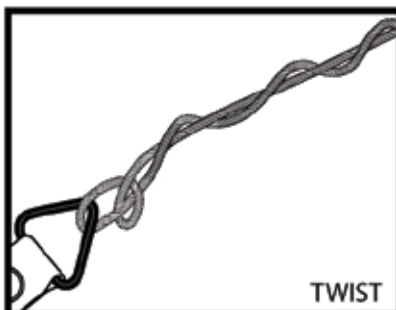


FRAMELESS DECORATIVE MIRROR HANGING INSTRUCTIONS

Read these instructions carefully before hanging this mirror.

WIRE ATTACHMENT

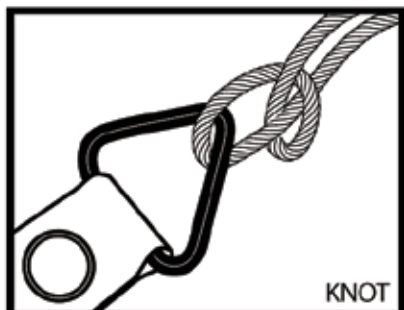

BLOCKS

Also included in the package are 2 blocks, which can be placed on the wood Masonite behind the mirror to create a space between the mirror and the wall. These spacer blocks are optional. Many of our decorative frameless mirrors have mosaic patterns or etched border, which picks up the color of the wall behind it. Creating space between the wall and the mirror enhances the beauty of the mirror. To create this float look, simply apply the sided tape supplied and adhere the blocks to the back of the Masonite on the mirror (see Illustrations). Make sure to leave enough slack on the wire to accommodate the additional spacing of the blocks. NOTE: these blocks are not structural and hanging devices should not be attached to them. They are for aesthetic use only.

