



How to Measure and Select Moulding

How to Measure for Moulding?

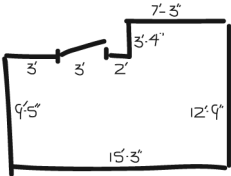


Figure 1

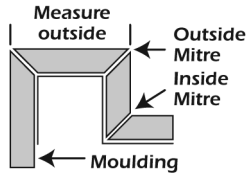


Figure 1.1

- Draw a floor plan of your room. (Figure 1)
- Measure the length of each wall and note the measurements on your plan. It is recommended to note the placement and size of any doors, windows, or openings in the room.
- Add the wall lengths together to get the total amount of baseboard and/or crown mould you will need to purchase. Add 15% for cutting mistakes and waste.
- For every opening identify the angle of each corner (Figure 1.1)
- Measure all openings allowing additional length for mitre cuts.
- Add all of the opening lengths together to get the total amount of casing you will need to purchase. Add 15% for cutting mistakes and waste.


Which Specie to Use?

Finger Joint Pine



Colour: White to pale yellow
Grain: Light, soft, straight grained, with a very uniform texture.
Application: Choose this product to paint and create your own unique décor solutions. Paint grade material.

Knotty Pine



Colour: White to pale yellow with distinctive tight dark brown knots.
Grain: Light, soft, straight grained, with a very uniform texture.
Application: Gives any application a classic rustic charm. Clear coat or stain.

Primed Finger Joint Pine



Colour: White
Grain: Light, soft, straight grained, with a very uniform texture
Application: Cuts and accepts adhesives very well. Accepts paint extremely well. Paint grade material.

Oak



Colour: Coral to burnish red
Grain: Straight grain with a course texture.
Application: A rich, full bodied wood that adds a royal quality and refinement to any project. Stain or varnish.

Primed Fiberboard MDF



Colour: White. Light to medium brown substrate.
Grain: No grain.
Application: Fiberboard (MDF) has no deformities, paints well, and is the species of choice for large profile mouldings. Paint grade material.

PVC



Colour: White
Grain: No grain
Application: A versatile man-made product that is waterproof, light, and takes adhesives extremely well. Paint or install as is.

Clear Pine



Colour: White to pale yellow with a reddish tinge
Grain: Light, soft, straight grained, with a very uniform texture.
Application: Clear coat or stain. Use the natural radiance of this soft and neutral coloured wood to fashion a country-cottage ambiance.

Hemlock



Colour: Light reddish brown, occasionally containing dark streaks
Grain: Generally straight grain with a course uneven texture
Application: Commonly used for construction purposes. Clear coat or stain.

What type of Moulding do I need?

Baseboard (Floors)

- Apply where the floor and wall meet to hide any imperfections.
- Protects the walls from kicks, bumps and general wear and tear.

Accessories:

- Base blocks for corner applications.
- Base shoe, quarter round or doorstop applied along the baseboard to soften the connection from floor to baseboard.



5706A-96168C

Casing (Door and window moulding)

- Apply around door and window openings.
- Covers the gap between door jamb and drywall.

Accessories:

- Doorstop to prevent door swing through
- Corner and plinth blocks for corner applications.
- Architrave to create a statement header on door frames.
- Use sills to build out window frames.
- Backband applied to the back of casing will build up the profile for more depth.



00621-93084C

Chair Rail and Wall Trim

- Apply chair rail 1/3 up the wall, parallel to the baseboards, to prevent chairs from marking the walls.
- When applied to the wall, panel mould can create detail and texture.
- Tap your imagination and let your creativity flow with these smaller trims.



05744-96096C

Crown Moulding

- Install where the ceiling meets the wall.
- Crown moulding naturally elevates the eyes and gives the feeling of height and space to a room.

Accessories:

- Inside and outside crown corner blocks. Easy installation without tricky miter cuts.



05982-96169C

Wall Coverings

- Install shiplap, beadboard and v-joint paneling on bare walls to add texture and detail to a room.
- Can be applied as a feature wall, a wainscot application or cover the entire room.

Accessories:

- Cap mould frames the top of wainscot walls



01056-96096C