


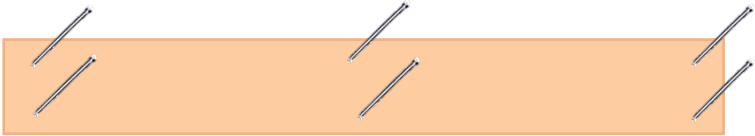
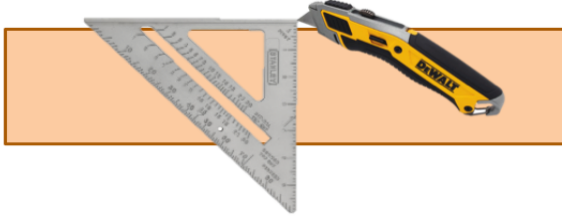




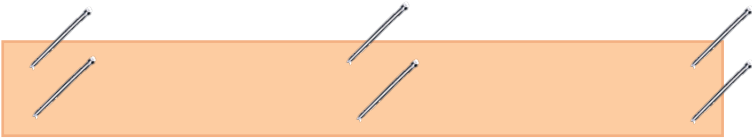
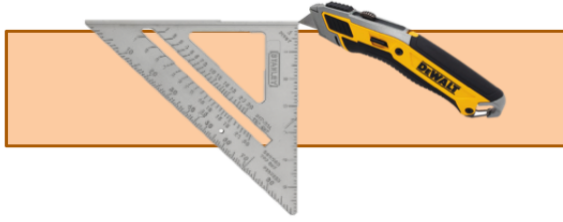


# WALL PLANKS INSTALLATION INSTRUCTION

<p>1. Select orientation: horizontal, vertical or diagonal.</p>	
<p>2. Using a level, draw a line on the wall for the Starter Plank.</p>	
<p>3. Prepare the finishing nails: either install the enclosed nail strip into the nail gun for 1" long and # 16 Gauge brad nails, or chip nails from the strip with a utility knife for installation with a hammer (this is also recommended for outdoors).</p>	
<p>4. Apply a starter plank at the line on the wall and affix it with the nails in each corner of the plank. Step at least 1 in. from each side or end of the plank to nail it. For full-length planks apply two more nails in the middle of the board.</p>	
<p>5. If you need to cut planks, use any wood saw (table saw or hand saw) or cut the furrow in the wood with a utility knife on <u>both</u> sides of the plank and break it against the edge of the table.</p>	
<p>6. If you need to attach wall art or shelves on top of the wall planks, drill the holes and put hangers <u>through</u> the planks on your wall. Don't hang anything heavier than 0.5 lbs. on the planks themselves!</p>	<p>7. Other installation options:</p> <ul style="list-style-type: none"> <li>- <b>Double-sided sticky foam</b> – we don't recommend using them alone (sooner or later the planks may fall down) if you don't secure planks with nails.</li> <li>- <b>Adhesive or liquid nails</b> – is not recommended but may be applied if you use a contractor for professional installation. The adhesive should be applied along the length of the planks with three thin strips (not the way as used for ceramic tiles (!)):</li> </ul> 

# INSTRUCTIONS D'INSTALLATION DES PLANCHES MURALES

<p>1. Choisir l'orientation : horizontale, verticale ou diagonale.</p>	
<p>2. En vous aidant d'un niveau, tracez une ligne sur le mur pour la planche de départ.</p>	
<p>3. Préparer les clous de finition : installer soit la bande de clous fournie dans le pistolet à clous pour des clous à souder de 1" de long et de calibre 16, soit écailler les clous de la bande avec un couteau utilitaire pour une installation avec un marteau (ceci est également recommandé à l'extérieur).</p>	
<p>4. Appliquez une planche de départ à la ligne sur le mur et fixez-la avec les clous dans chaque coin de la planche. Marche d'au moins 1 po de chaque côté ou extrémité de la planche pour la clouer. Pour les planches de pleine longueur, appliquez deux clous supplémentaires au milieu de la planche.</p>	
<p>5. Si vous devez couper des planches, utilisez n'importe quelle scie à bois (scie à table ou scie à main) ou coupez le sillon dans le bois à l'aide d'un couteau utilitaire des <u>deux</u> côtés de la planche et cassez-le contre le bord de la table.</p>	
<p>6. Si vous avez besoin de fixer de l'art mural ou des étagères sur les planches murales, percez les trous et placez des suspentes à travers les planches sur votre mur. N'accrochez rien de plus lourd que 0,5 lb (0.225 kg) sur les planches elles-mêmes !</p>	<p>7. Autres options d'installation :</p> <ul style="list-style-type: none"><li>- <b>Mousse adhésive double-face</b> – nous ne recommandons pas de les utiliser seuls (tôt ou tard, les planches pourraient tomber) si vous ne les fixez pas solidement avec des clous.</li><li>- <b>Clous adhésifs ou liquides</b> – ce n'est pas recommandé, mais ils peuvent être appliqués si vous faites appel à un entrepreneur pour une installation professionnelle. L'adhésif doit être appliqué sur toute la longueur des planches à l'aide de trois bandes minces (pas de la même façon que pour les carreaux de céramique (!)) :</li></ul> 