

U-9511, U-9512

Installation instructions


- Use one-way screws for jamb bracket (use 1/8" drill bit and [3] 1-1/4" screws).
- Pre-drill screw holes for door bracket to prevent wood door from splitting (use 3/32" bit and [2] 1" flat head sheet metal screws), when attaching bracket.
- Pre-drill metal doors with 1/8" bit and use (2) 3/4" screws.

Instructions d'installation

- Vis à sens unique pour le support du jambage. (Employez une mèche de 1/8" et trois [3] vis de 32 mm).
- Percez à l'avance les orifices à vis pour empêcher le bois de la porte d'éclater (employez une mèche de 3/32" et deux [2] vis à bois à tête plate de 25 mm).
- Percez à l'avance les portes de métal avec une mèche de 1/8" et deux [2] vis de 19 mm).


Instrucciones para la instalacion

- Tornillos de una via para el sostén de marco de la puerta (use un bocado de taladro de 1/8" y tres [3] tornillos de 32 mm.)
- Haga hoyos preliminares para los tornillos para prevenir que la puerta se raje (use un bocado de taladro de 3/32" y dos [2] tornillos de 25 mm de cabeza plana para agregar el sostén de la puerta.)
- Haga hoyos preliminares el la puerta metálica con un bocado de taladro de 1/8" y use dos [2] tornillos de 19 mm.

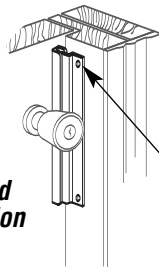

**Closed
Position**

One-way screws
Vis à sens unique
Tornillos de una via

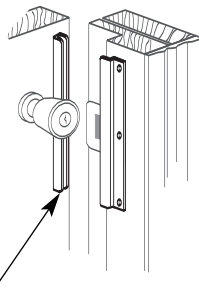

**Open
Position**

1" flat head sheet metal screws
Vis à bois à tête plate de 25 mm
Tornillos de 25 mm de cabeza plana